 


 
# ASSEMBLY INSTRUCTION

## TV 410 B

 
**Step 1**

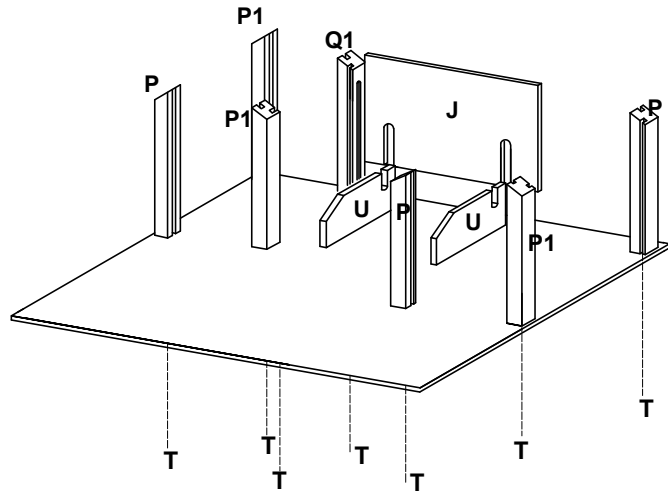

 
**Step 2**

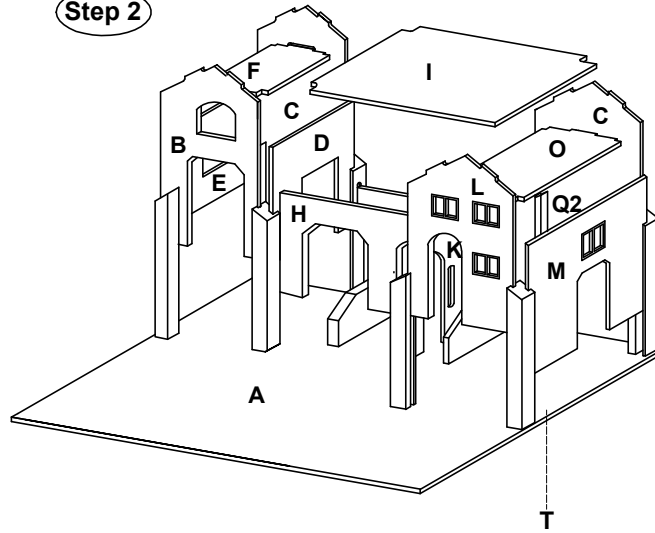

 
 
 
 
 


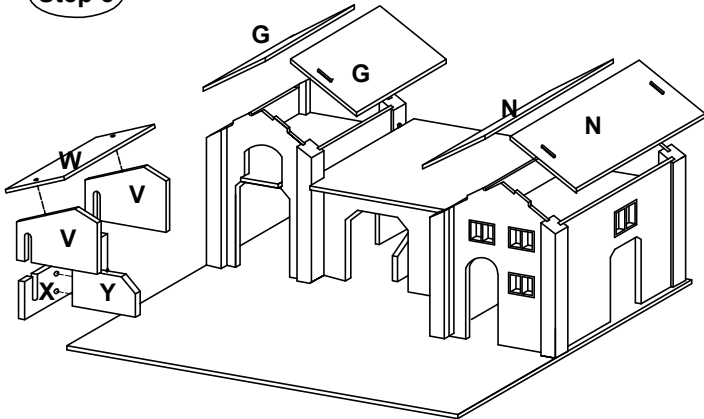 


 

 
 

 
 

 
 


 
 
 
 
 
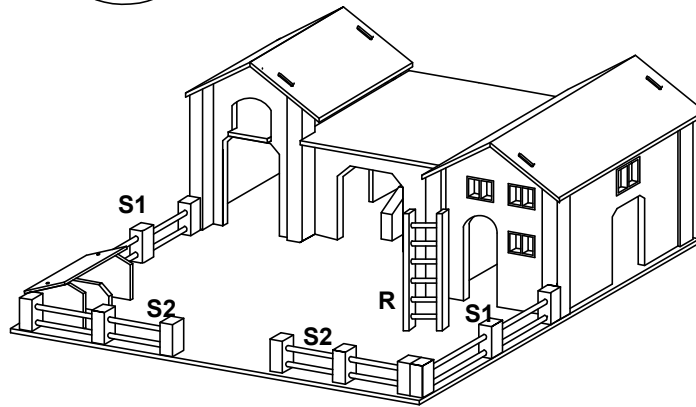 
**Step 3**



**Step 4**



**ADULT ASSEMBLY REQUIRED**

A		X1	N		X2
B		X1	O		X1
C		X2	P		X3
			P1		X3
D		X1	Q1		X1
			Q2		X1
E		X1	R		X1
F		X1	S1		X2
G		X2	S2		X2
H		X1	T		GG-19 X8
I		X1	U		X2
J		X1	V		X1 X1
K		X1	W		X1
L		X1	X		X1
M		X1	Y		X1